



Gaiter Sizing

1. Measure the circumference of your calf over trousers below the knee (A).
2. Measure the circumference of the top of your boot just above the ankle (B).
3. Measure the distance between A and B

Compare your measurements with the table below when ordering gaiters.
Please call us if you need help with your order.

Please tick

- Small
- Medium
- Large
- Extra Large



Size	Small	Medium	Large	X Large
Calf (A)	34-36cm	36-38cm	39-41cm	41.5-43.5cm
Boot (B)	36-38cm	37-39cm	40-42cm	41-43cm
Length (C)	40cm	41.5cm	43cm	44cm

Phone 02 **6021 6200**
479 Dean Street
Albury NSW 2640
www.huntshop.com.au